

Kit No. 60727

*Please read these instructions completely before proceeding with the installation.*

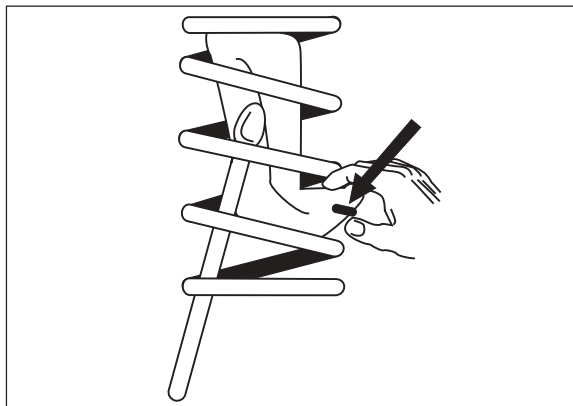


Figure 1


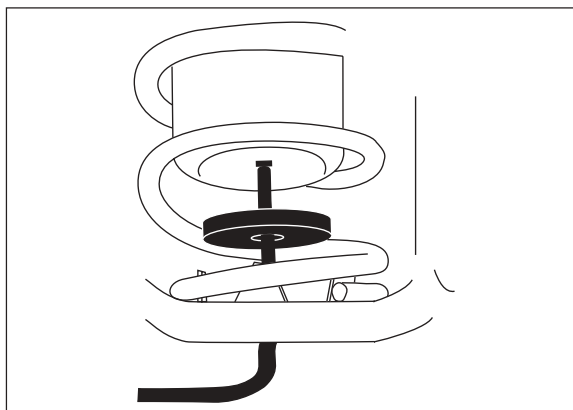


Figure 2

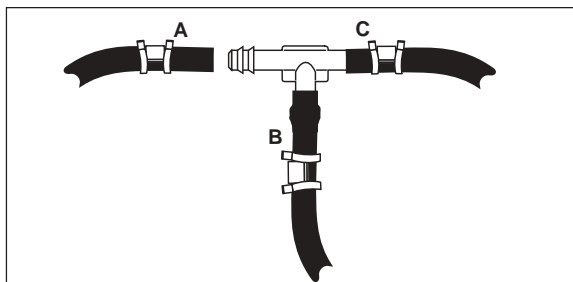

Use this procedure for all air line connections:  
A. Slide air line clamp onto the air line.  
B. Push air line over the barbed stem.  
C. Compress the ears on the air line clamp with pliers and slide it forward to fully cover the barbed section.

Figure 3

## I. Preparing the Vehicle

1. Jack up rear of vehicle or raise on hoist. Support frame with safety stands and remove rear tires.
2. Mark the spring and spring seat with a marker.
3. With a jack supporting the lower control arm, remove the lower shock bolt.

*NOTE: If equipped with a sway bar, disconnect it from the lower control arm.*

4. Drop the lower control arm down with the jack low enough to remove the coil spring.

*CAUTION: Observe the tension on any brake or electrical lines. Do not strain.*

5. **Saturn Vue and Chevy Equinox only:** Remove the jounce bumper assembly from the bottom of the lower control arm and discard.
6. Drill out or enlarge the hole in the A-arm to  $\frac{3}{4}$ " in diameter.
7. Insert the air cylinder into the coil spring with the stem pointing down (Figure 1).
8. Install the spring back into the suspension. Attach the sway bar and shock bolt and tighten securely. Push the cylinder to the top of the coil spring.
9. With the suspension hanging, insert the protector between the bottom of the cylinder and the lower control arm (Figure 2).

## III. Installing the Air Lines

*Air tee line installation is recommended unless weight in vehicle varies from one side to the other and unequal pressures are needed to level the load (or compensate for axle torque transfer in racing applications). Use dual air lines if this is the case.*

*CAUTION: To prevent air line from melting, keep it at least 8" from exhaust system.*

### TEE AIR LINE ROUTING

1. Locate desired tee location on the frame rail or cross member. Determine and cut adequate length of air line to reach from tee to left and right side on air cylinders.

*CAUTION: Leave sufficient air line slack to prevent any strain on fitting during axle motions.*

2. Slide air line clamp onto the air line.
3. Push the air line over one side of the tee until all the barbs are covered. With a pair of pliers, slide the air line clamp forward until it fully covers the barbed section. Repeat entire procedure for other leg of tee (Figure 3).

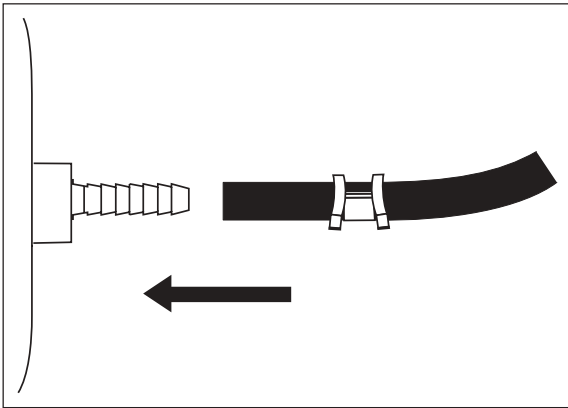


Figure 4

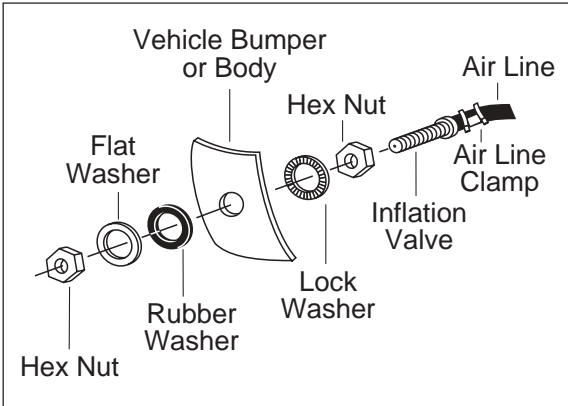


Figure 5

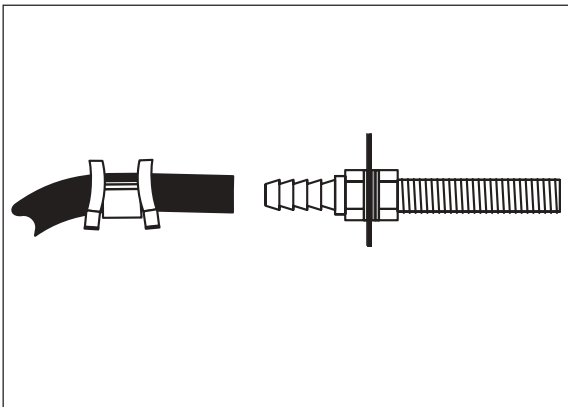


Figure 6

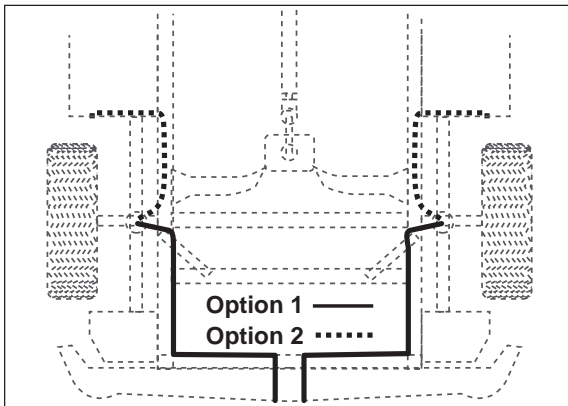


Figure 7

4. Route along cross member and either lower control arm or upper spring seat to air cylinder.
  5. Insert air line through spring seat and spacers.
  6. Push the air line onto the stem, covering all the barbs (Figure 4). With the pliers, slide the air line clamp upward until it fully covers the barbed section.
  7. Push the remaining air line over the last fitting on tee and route along frame to desired inflation valve location (Figure 4). Attach with plastic straps or wire.
  8. Select a location for inflation valve in the gas cap well, the trunk, rear bumper, fender flange or behind license plate, insuring that the valve will be protected and accessible with an air hose.
  9. Drill  $\frac{5}{16}$  " hole for inflation valve and mount as in illustration (Figure 5). Rubber washer is for outside weather seal.
  10. Slide air line clamp over the air line. Push air line onto fitting covering all barbs, with pliers slide the air line clamp forward until it fully covers the barbed section (Figure 6).
  11. Raise axle or lower body until air cylinders lightly touch upper spring seat and lower spacers.
  12. Check tail pipe clearance and insure that it is at least 2-3 inches from air cylinder. If necessary, loosen clamps and rotate or move to obtain additional clearance. If heat shield is provided, install. Attach shock absorbers if removed earlier in the installation.
- CAUTION: Do not inflate air cylinders before reading the Maintenance and Operation section.*
13. Continue on with Section IV, Completing the Installation.

### **DUAL AIR LINE ROUTING**

*CAUTION: To prevent air line from melting, keep it at least 8" from exhaust system.*

1. Select a location for the inflation valves in the rocker panel flange, or rear bumper, assuring that each valve will be protected and accessible with an air hose (Figure 7).
  2. Determine and cut adequate length of air line to reach from valve location to left side air cylinder.
- CAUTION: Leave sufficient air line slack to prevent any strain on fitting during axle motions.*
3. Insert the air line through the spring seat and spacer.
  4. Slide air clamp onto the cut air line.
  5. Push the air line onto the stem, covering all the barbed section (Figure 4). With pliers slide the air line clamp forward until it fully covers barbed section.
  6. Repeat process for right side.
  7. Drill  $\frac{5}{16}$  " hole for inflating valves and mount as illustrated. Rubber washer is for outside weather seal (Figure 5).
  8. Route air line along control arm and frame to inflation valve

location and cut off excess.

- Slide a clamp onto the air line and push the air line over the fitting, covering all the barbs. With pliers slide the air line clamp forward until it fully covers the barbed section (Figure 6).
- Raise axle or lower body until air cylinders lightly touch upper spring seat and lower spacers.
- Check tail pipe clearance and insure that it is at least 2-3 inches from air cylinders. If necessary, loosen clamps and rotate or move to obtain additional clearance. If heat shields are supplied, install them. Attach shock absorbers if removed earlier in the installation.

#### IV. Completing the Installation

*CAUTION: Do not inflate air cylinders before reading the Maintenance and Operation section below.*

- Inflate cylinders to 35 lbs air pressure. Test for air leaks by applying a liquid solution of  $\frac{1}{5}$  dish soap to  $\frac{4}{5}$  water to all valve cores, fittings and connections.
- Lower vehicle to the ground. Read Maintenance and Operation section for proper care of your air cylinders.
- Recheck air pressure after 24 hours. A 2-4 p.s.i. loss after initial installation is normal. If pressure has dropped more than 5 lbs. retest for leaks with a soapy/water solution.

#### V. Maintenance and Operation

- Check the air pressure in the air springs weekly.
- Always maintain at least the 5 p.s.i. air pressure to prevent chafing or coil pinch.
- If you develop a leak in the system, use a soapy/water solution to check all air line connections and the valve core before removing the cylinder.
- Inflate your air springs to 35 p.s.i. before adding the payload. This will allow the air cylinder to properly mesh with the coil spring. After vehicle is loaded, adjust your air pressure (down) to level the vehicle and for ride comfort.
- When you are carrying a payload it will be helpful to increase the tire inflation pressure in proportion to any overload condition. We recommend a 2 p.s.i. increase above normal (not to exceed tire manufacturers maximum) for each 100 lbs. additional load on the axle.

*CAUTION: Do not exceed the vehicle manufacturers maximum gross vehicle weight rating.*

Minimum Air Pressure	Maximum Air Pressure
5 p.s.i.	35 p.s.i.

***Failure to maintain minimum pressure will void the warranty.***



#### ***Thank you for purchasing Air Lift Products***

Mailing Address:  
AIR LIFT COMPANY  
P.O. Box 80167  
Lansing, MI 48908-0167

Street Address:  
AIR LIFT COMPANY  
2727 Snow Rd.  
Lansing, MI 48917

Local Phone: (517) 322-2144  
Fax: (517) 322-0240

For Technical Assistance call 1-800-248-0892

***“The Choice of the Professional Installer”***

Printed in the USA



# Product Use Information

## Frequently asked questions

**Q. Will installing air springs increase the weight ratings of a vehicle?**

No. Adding air springs will not change the weight ratings (GAWR, GCWR and/or GVWR) of a vehicle. Exceeding the GVWR is dangerous and voids the Air Lift warranty.

**Q. Is it necessary to keep air in the air springs at all time and how much pressure will they need?**

The minimum air pressure should be maintained at all times. The minimum air pressure keeps the air spring in shape, ensuring that it will move throughout its travel without rubbing or wearing on itself.

**Q. Is it necessary to add a compressor system to the air springs?**

No. Air pressure can be adjusted with any type of compressor as long as it can produce sufficient pressure to service the springs. Even a bicycle tire pump can be used, but it's a lot of work.

**Q. How long should air springs last?**

If the air springs are properly installed and maintained they can last indefinitely.

**Q. Will raising the vehicle on a hoist for service work damage the air springs?**

No. The vehicle can be lifted on a hoist for short-term service work such as tire rotation or oil changes. However, if the vehicle will be on the hoist for a prolonged period of time, support the axle with jack stands in order to take the tension off of the air springs.

## Tuning the air pressure

Pressure determination comes down to three things — level vehicle, ride comfort, and stability.

**1. Level vehicle**


If the vehicle's headlights are shining into the trees or the vehicle is leaning to one side, then it is not level (fig. 1). Raise the air pressure to correct either of these problems and level the vehicle.

**2. Ride comfort**

If the vehicle has a rough and harsh ride it may be due to either too much pressure or not enough (fig. 2). Try different pressures to determine the best ride comfort.

**3. Stability**

Stability translates into safety and should be the priority, meaning the driver may need to sacrifice a perfectly level and comfortable ride. Stability issues include roll control, bounce, dive during braking and sponginess (fig. 3). Tuning out these problems usually requires an increase in pressure.

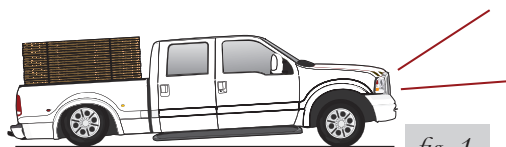

Bad headlight aim




Sway and body roll



Rough ride


**Guidelines for adding air:**

1. Start with the vehicle level or slightly above.
2. When in doubt, always add air.
3. For motorhomes, start with 50-100 PSI in the rear because it can be safely assumed that it is heavily loaded.
4. If the front of the vehicle dives while braking, increase the pressure in the front air bags, if equipped.
5. If it is ever suspected that the air bags have bottomed out, increase the pressure (fig. 4).
6. Adjust the pressure up and down to find the best ride.
7. If the vehicle rocks and rolls, adjust the air pressure to reduce movement.
8. It may be necessary to maintain different pressures on each side of the vehicle. Loads such as water, fuel, and appliances will cause the vehicle to be heavier on one side (fig. 5). As much as a 50 PSI difference is not uncommon.

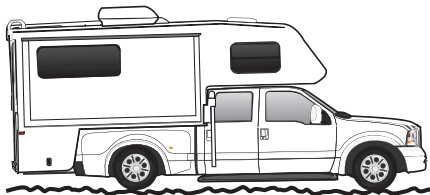


Bottoming out

fig. 4

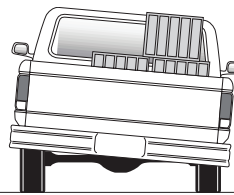

Unlevel

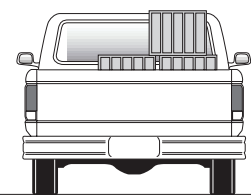

Level

fig. 5

## Warranty and Returns Policy

Air Lift Company warrants its products, for the time periods listed below, to the original retail purchaser against manufacturing defects when used on catalog-listed applications on cars, vans, light trucks and motorhomes under normal operating conditions for as long as Air Lift manufactures the product. The warranty does not apply to products that have been improperly applied, improperly installed, used in racing or off-road applications, used for commercial purposes, or which have not been maintained in accordance with installation instructions furnished with all products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid, to the dealer from which it was purchased or to Air Lift Company for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift at (800) 248-0892 in the U.S. and Canada (elsewhere, (517) 322-2144) for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Company • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that vary from state-to-state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. (Dated proof of purchase required.)

<b>Air Lift 1000</b> .....	<b>Lifetime Limited</b>
<b>RideControl</b> .....	<b>Lifetime Limited</b>
<b>SlamAir</b> .....	<b>Lifetime Limited</b>
<b>LoadLifter 5000*</b> .....	<b>Lifetime Limited</b>
<b>EasyStreet Systems</b> .....	<b>1 Year Limited</b>

<b>Load Controller (I)</b> .....	<b>2 Year Limited</b>
<b>Load Controller (II)</b> .....	<b>2 Year Limited</b>
<b>SmartAir</b> .....	<b>2 Year Limited</b>
<b>Wireless AIR</b> .....	<b>2 Year Limited</b>
<b>Other Accessories</b> .....	<b>2 Year Limited</b>

*\*formerly SuperDuty*

**Thank you for purchasing Air Lift products! For technical support, please call (800) 248-0892.**  
 Air Lift Company • P.O. Box 80167, MI 48908-0167 • (517) 322-2144 • Fax: (517) 322-0240 • [www.airliftcompany.com](http://www.airliftcompany.com)