

# GATORBACK

Steel

## Mud Flap Mounting Bracket Set

Universal, 14", 1" Offset

### Mounting Diagram & Instructions

Part #756714 (Stainless

#### IMPORTANT:

**The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**

#### TOOLS REQUIRED:



Electric or re-chargeable  
1/2" or 3/8" drill.



1/4" Drill bit




Phillips Screw  
Driver



3/8" Socket Driver

#### KIT CONTAINS:


a) (1) Upper Panel, DS  
Part #755761



b) (1) Upper Panel, PS  
Part #755762



c) (2) Back Strip, 14"  
Part #755612



d) (8) Mach. Screw, SS  
8-32 x 5/8"  
Part #012034



e) (8) Tek Screw,  
1/4" x 1-1/4", SS  
Part #010011




f) (8) Washer, SS  
0.28 x 1"  
Part #018028



#### INSTRUCTIONS:

1. Before you install your upper mounts, see the Diagram and parts list for all necessary parts. Start on the Driver's Side.
2. Cut the optional rubber flap to the required height, Minimum 11 - 5/16" (See Diagram #1)
3. Lay upper panel on the cut rubber flap and drill four 1/4" (4) Holes from the panel holes through the rubber flap. (See Diagram #2)
4. Fasten the panel and the back strip to the rubber flap with the four (4) machine screws #012034. (See Diagram #3)
5. Square the flap with the tire while holding the flap up against the wheel well and the offset flange tuck underneath the wheel well. (See Diagram #3)
6. Locate the center of the wheel well or wheel flare on the back side of the stainless steel panel and drill four 1/4" holes from 'A' to 'D' on the stainless steel panel only.

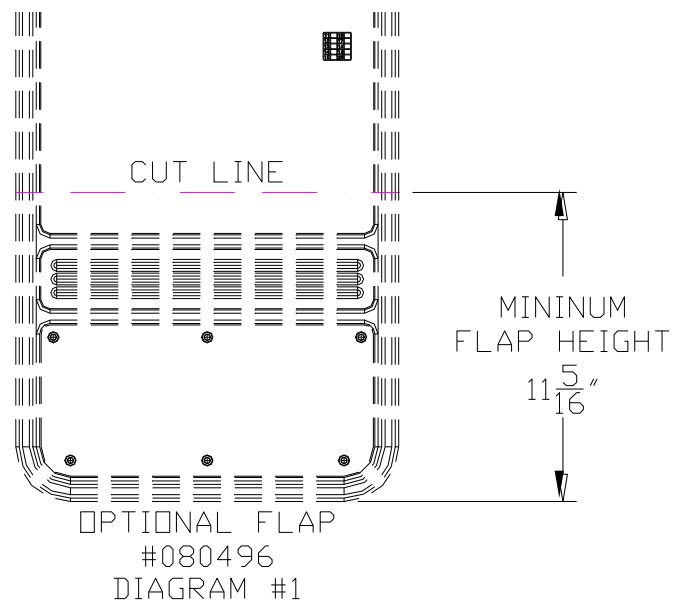

**Note: Drill with caution, do not drill through the wheel well or wheel flare.**

8. Secure the flap with four flat washers and four tek screws on hole 'A' to 'D'.
9. for the passenger side. Mud Flaps are now ready to install onto a vehicle.

Diagram #1

Diagram #2

Diagram #3

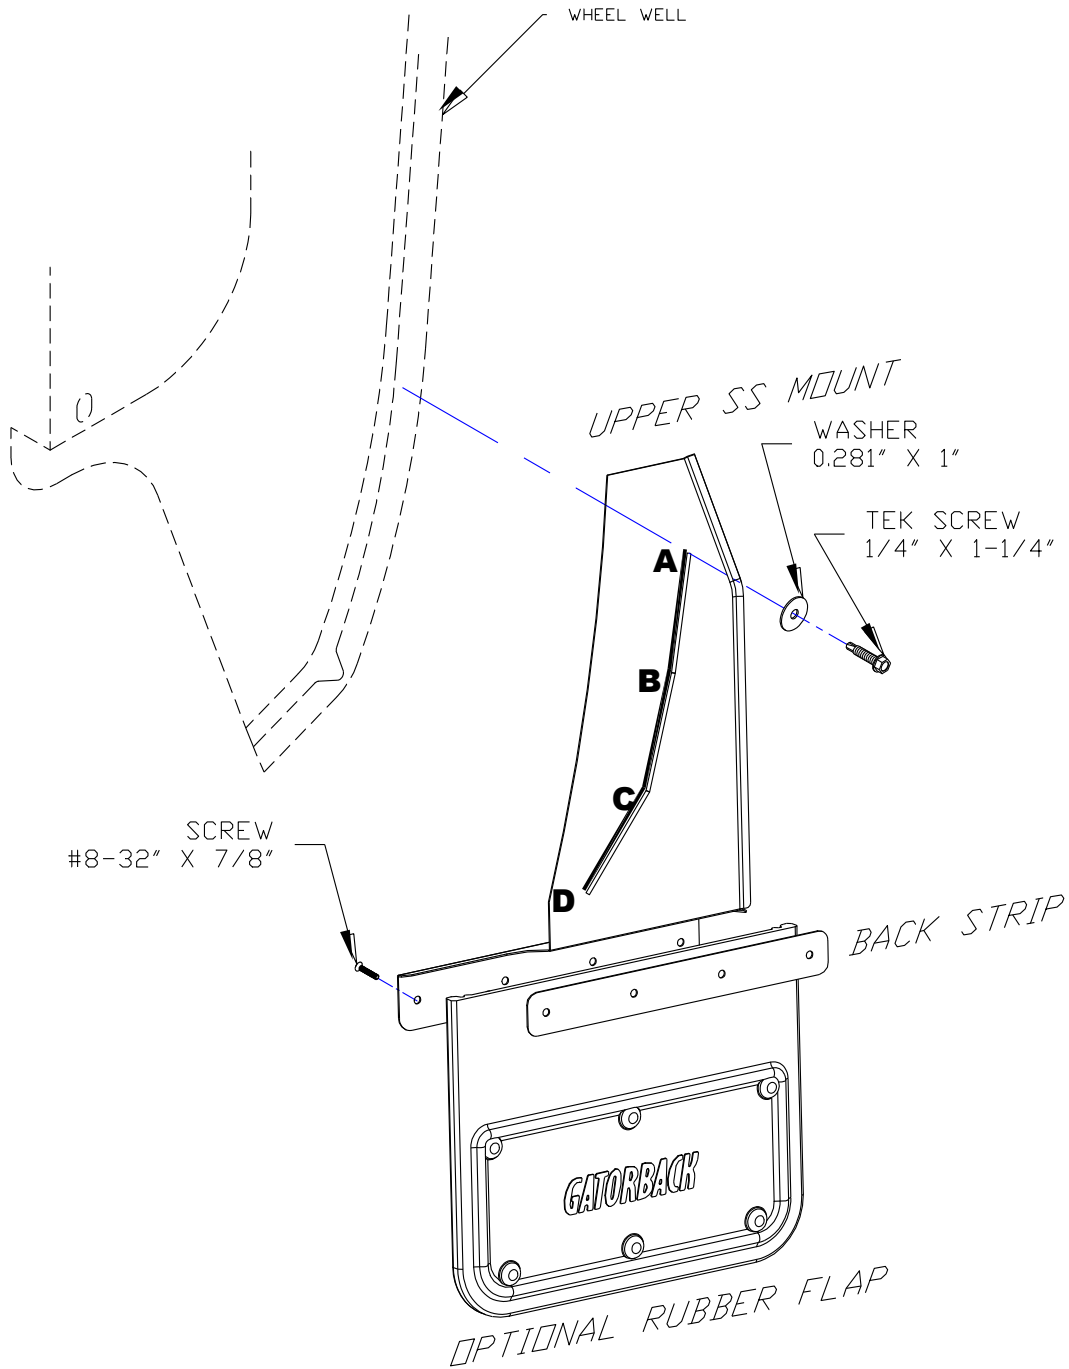


DIAGRAM #3