

Mud Flap Mounting Bracket Set

Universal, 12", 1" Offset Mounting Diagram & Instructions Part #756729 (Black Power Coated)

1 drt #7 JO7 29 (Black Power Coalea,


IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

TOOLS REQUIRED:




KIT CONTAINS: PARTS BAG #755638

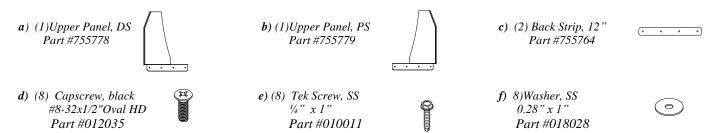

INSTRUCTIONS:


- 1. Before you install your upper mounts, see the Diagram and parts list for all necessary parts. Start on the Driver's Side.
- 2. Cut the optional rubber flap to the required height, Minimum 10-11/16" (See Diagram #1)
- 3. Lay upper panel on the cut rubber flap and drill four 1/4" (4) Holes from the panel holes thorough the rubber flap. (See Diagram #2)
- 4. Fasten the panel and the back strip to the rubber flap with the four (4) Capscrews. (See Diagram #3)
- 5. Square the flap with the tire while holding the flap up against the wheel well and the offset flange tuck underneath the wheel well. (See Diagram #3)
- 6. Locate the center of the wheel well or wheel flare on the back side of the stainless steel panel and drill four 1/4" holes from 'A' to 'D' on the stainless steel panel only.

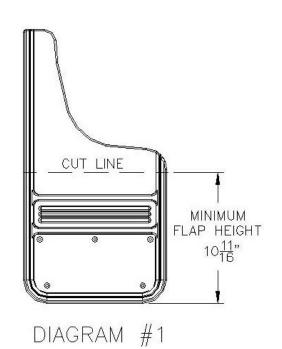

Instructions: #756729 Page 2

Note: Drill with caution, do not drill through the wheel well or wheel flare.

- 7. Cut protective plastic and peel away from the stainless steel.
- 8. Secure the flap with four flat washers and four tek screws on hole 'A' to 'D'.
- 9. Repeat procedure for the passenger side. Mud Flaps are now ready to install onto a vehicle.

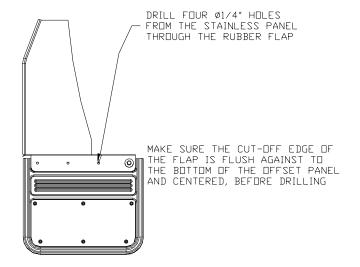

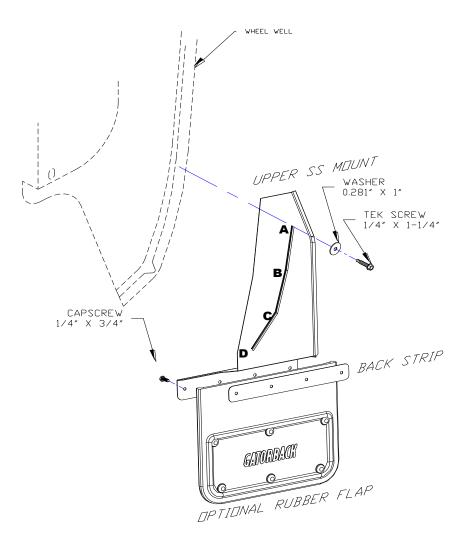


DIAGRAM #3